

HUAWEI

MediaPad T1 8.0

User Guide



1 Welcome 1

2 Getting started 2

HUAWEI MediaPad T1 8.0 at a Glance 2

Installing the SIM and microSD Cards 2

Charging the Battery 3

Important information about the battery 4

Your home screen at a glance 5

Notification and status icons 6

Common keys 6

Shortcut operations 7

3 Text input 9

Editing Text 9

Selecting an input method 9

4 Network connection 10

Connecting to a Wi-Fi network 10

Connecting to a Wi-Fi network using WPS 10

Turning on your mobile data connection 10

5 Network sharing 11

Sharing your network using a Wi-Fi hotspot 11

Sharing your data connection through USB tethering 11

6 Managing applications 12

Installing an application 12

Clearing the application cache 12

Uninstalling an application 12

7 Email 13

Adding an email account 13

Configuring an email account 13

Deleting an email account 13

8 Multimedia 14

Viewing photos or videos 14

Taking a panoramic photo 14

Editing a photo 15

Sharing photos or videos 15

9 Customized settings 16

Changing the theme 16

- Adding widgets to the home screen 16
- Managing your home screen 17
- Setting the ringtone 18
- Setting the font size 18
- Adjusting the screen brightness 19

10 File sharing 20

- Sharing files using Wi-Fi Direct 20
- Sharing files using Bluetooth 20
- Copying files from a computer 21

11 Contacts 22

- Creating a contact 22
- Synchronizing contacts 22
- Importing contacts 22
- Backing up contacts 23
- Sharing contacts 23

12 Calls 24

- Making an emergency call 24
- Adding an unknown number to your contacts 24
- Clearing call logs 24

13 Messaging 25

- Searching for a message 25
- Customizing message settings 25

14 Settings 26

- Setting the screen timeout period 26
- Setting a screen lock 26
- Adjusting the volume 26
- Checking the memory status 26
- Setting the date and time 26
- Formatting a microSD card 27
- Restoring factory settings 27
- Updating your HUAWEI MediaPad 27

15 Personal Information and Data Security 28

16 Legal Notice 29

1 Welcome

Welcome to the bright new world of the HUAWEI MediaPad T1 8.0 (HUAWEI MediaPad for short).

With your HUAWEI MediaPad, you can:

- Surf the Internet at lightning-fast speeds.
- Take photos and record videos anytime, anywhere.
- Enjoy the latest and hottest movies.
- Immerse yourself in an extraordinary audio experience.
- And much more

Your HUAWEI MediaPad sets your imagination and creativity free. Start using it now and discover all the pleasant surprises that await you.

 



- The figures in this guide are from the **Green** theme. To better understand the content of this guide, switch your HUAWEI MediaPad to the **Green** theme. For details, see [Changing the theme](#).
- All pictures and illustrations in this document are for your reference only. The actual product may vary.
- The Wi-Fi only version of the HUAWEI MediaPad does not support SIM cards, so it does not provide functions related to mobile networks, such as calls and messaging.

2 Getting started


HUAWEI MediaPad T1 8.0 at a Glance


Congratulations on your purchase of the HUAWEI MediaPad T1 8.0.

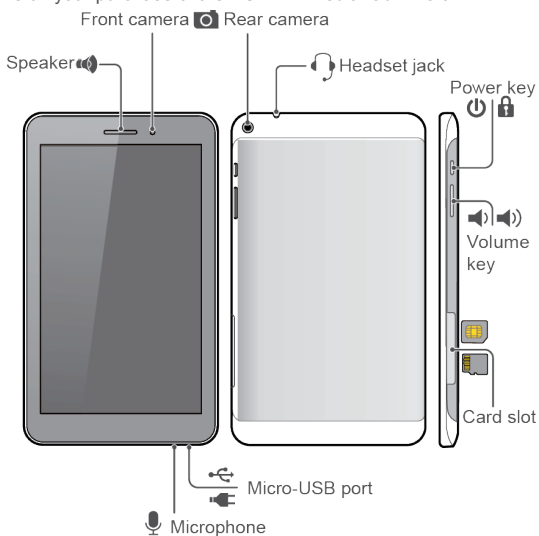

-  Press and hold the power key to power on or off your device or restart it. Press the power key once to turn on or off the screen.

Installing the SIM and microSD Cards

 Your HUAWEI MediaPad supports only standard micro-SIM cards. Do not insert any other cards as doing so may damage your device. Contact your carrier to replace or purchase a micro-SIM card. Do not insert or remove the micro-SIM card when your device is powered on.

-  The dimensions of a standard micro-SIM card are 15 mm x 12 mm x 0.76 mm (0.59 in. x 0.47 in. x 0.03 in.).
- The Wi-Fi only version of the HUAWEI MediaPad does not support micro-SIM cards.



1. Open the SIM and microSD card slot cover.
2. Insert the SIM card with its gold contacts facing up, as indicated in the preceding figure. Push the card inward until it clicks into place.
3. Insert the microSD card with its gold contacts facing up, as indicated in the preceding figure. Push the card inward until it clicks into place.
4. Replace the card slot cover.

To remove the microSD card when your HUAWEI MediaPad is powered on, on the home



screen, touch **Settings > Storage > Unmount SD card**. When the microSD card is uninstalled, remove the back cover and gently remove the card.

Charging the Battery

 




Your HUAWEI MediaPad uses a built-in battery that is not removable. To replace the battery, contact an authorized service center. Do not attempt to remove it yourself.

When the battery level becomes low, charge your HUAWEI MediaPad in a timely manner; otherwise it automatically powers off when the battery power is depleted.

If you are charging the battery for the first time, charge it for at least 12 hours to ensure that your HUAWEI MediaPad can correctly display the battery level.

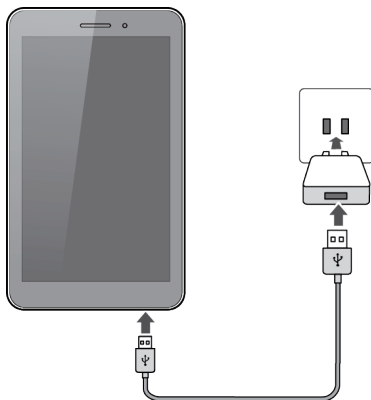1. Use the USB cable that comes with your HUAWEI MediaPad to connect the charger to your device.
2. Connect the charger plug to a power outlet.






- If the device is powered on, the battery is charging when the battery icon in the status bar changes to .
- If the device is powered off, the battery is charging when  is displayed on the screen.

Important information about the battery

- If the battery has not been used for a long period of time or if the battery power is depleted, then you may not be able to power on the HUAWEI MediaPad immediately after you begin charging the battery. This is normal since the battery must be allowed to charge for a few minutes before attempting to power on your device.
- The HUAWEI MediaPad may generate excessive heat on its surface after continuously running for a long period of time, especially in a high temperature environment. When the HUAWEI MediaPad becomes hot, stop charging, close running applications, and move it to a cool place. Avoid holding on to the overheated HUAWEI MediaPad for too long for risk of burn injuries.
- It is strongly recommended that you use the charger and USB cable provided with the HUAWEI MediaPad to charge the device. Using other chargers or USB cables may cause the HUAWEI MediaPad performance to decline or impose safety risks. When charging the HUAWEI MediaPad, do not operate or cover it or the power adapter with any objects.
- The battery is rechargeable and has a limited number of charge cycles. When the HUAWEI MediaPad is used for a long period of time, its standby time will be shortened. In order to maximize its life span, do not charge the battery too frequently.
- The time required to fully charge the battery depends on the ambient temperature and the age of the battery.

























Your home screen at a glance













 



-
- | | |
|----------|------------------------------------------------------|
| 1 | Display area: Display widgets and application icons. |
|----------|------------------------------------------------------|
-
- | | |
|----------|-----------------------------------------------|
| 2 | Dock: displays your most common applications. |
|----------|-----------------------------------------------|
-
- | | |
|----------|-------------------------------------------------------------------------------------------------------------------------------------|
| 3 | Back key: Touch  to return to the previous screen. |
|----------|-------------------------------------------------------------------------------------------------------------------------------------|
-
- | | |
|----------|------------------------------------------------------------------------------------------------------------------------------|
| 4 | Home key: Touch  to go to the home screen. |
|----------|------------------------------------------------------------------------------------------------------------------------------|
-
- | | |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5 | Recent key: Touch  to view recently used applications and running applications. |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
-
- | | |
|----------|------------------------------------------------------------------------------------------------------------|
| 6 | Status bar: Display information such as time, Wi-Fi connection status, signal strength, and battery level. |
|----------|------------------------------------------------------------------------------------------------------------|
-

Notification and status icons

The notification and status bars may display the following icons to inform you of your HUAWEI MediaPad's status.

 
	Airplane mode		Bluetooth on
	GPS in use		Charging
	Battery full		Battery extremely low
	New email		Wi-Fi hotspot on
	SIM card not inserted		Preparing the microSD card
	Upcoming event		Alarms enabled
	Uploading or sending files		Downloading or receiving files
	Memory full		System exception
	Synchronizing data		Synchronization failed
	Connected to a VPN		USB tethering on
	Wi-Fi networks available		Connected to a Wi-Fi network
	USB debugging on		Headset connected

Common keys

 
	More		Share
	Completed		Edit
	Attachment		Add
	Search		Set
	Refresh		Delete data
	Favorites		Save
	Clean the system environment		Call




Shortcut operations

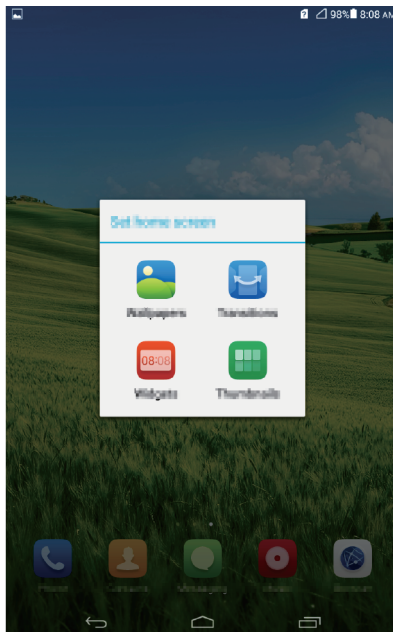- To open an application: On the home screen, touch the application.
- To switch between the home screen and its extensions: On the home screen, flick your finger left or right.
- To customize the home screen: Touch and hold a blank area on the home screen. On the displayed option menu, set the wallpaper, widgets, and more.

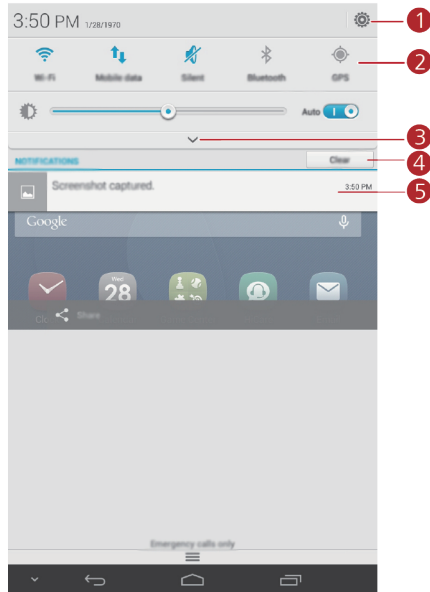


- Flick down from the status bar to open the notification panel.



-
- | | |
|----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Touch  to display the settings screen. |
| 2 | Touch the switch shortcuts on the notification panel to turn on or off the functions. |
| 3 | Touch  to display the switch shortcut list and touch  to edit it. |
| 4 | Touch Clear to delete all notifications. |
| 5 | Touch an application to start it and flick left or right across a notification to dismiss it. |
-






3 Text input

Your HUAWEI MediaPad comes with multiple input methods. You can quickly enter text using the onscreen keyboard.

- Touch a text input field to bring up the onscreen keyboard.
- When you are done, touch  to hide the onscreen keyboard.

Editing Text

You can copy, cut, and paste text.

- **Select text:** Touch and hold the text field until  and  appear. Drag  and  to select the text you want to edit, or touch **Select all** to select all text.
- **Copy text:** After selecting text, touch **Copy**.
- **Cut text:** After selecting text, touch **Cut**.
- **Paste text:** Touch where you want to insert the text (to move the insertion point, drag ) and touch **Paste** to paste the text you copied or cut.


Selecting an input method



The HUAWEI MediaPad provides multiple ways to text input. You can select the input method you like.



1. On the text editing screen, touch a text field to bring up the onscreen keyboard.
2. Flick down from the notification bar to display the notification panel.
3. On the notification panel, touch **Choose input method**.
4. On the displayed option menu, select the desired input method.

4 Network connection

Connecting to a Wi-Fi network

 When both a Wi-Fi network and a mobile network are available simultaneously, the HUAWEI MediaPad connects to the Wi-Fi network by default. If the Wi-Fi network disconnects, the HUAWEI MediaPad then automatically connects to the mobile network.



1. On the home screen, touch  **Settings** > **Wi-Fi**.
2. Touch the key next to **Wi-Fi** or drag the key to . Your HUAWEI MediaPad then automatically scans for available Wi-Fi networks.
3. Select the desired Wi-Fi network and follow the onscreen instructions.

 If the Wi-Fi network you selected has a hidden SSID, then touch  > **Add network** and follow the onscreen instructions to enter the required network information (including the SSID) to connect to the Wi-Fi network.


Your HUAWEI MediaPad consumes more power when Wi-Fi is turned on. To save battery power, turn off Wi-Fi when it is not in use.


Connecting to a Wi-Fi network using WPS

If the wireless router being used supports the Wi-Fi protected setup (WPS) function, you can quickly connect to a Wi-Fi network using WPS.

1. On the home screen, touch  **Settings** > **Wi-Fi**.
2. Touch  > **WPS Push Button** or **Input WPS PIN**. Then, follow the onscreen instructions to perform operations on the wireless router.

Turning on your mobile data connection

 The Wi-Fi only version of the HUAWEI MediaPad does not support this function.
Using mobile data services may incur data usage charges. For details, contact your service provider.

1. On the home screen, touch  **Settings**.
2. Touch **More...** > **Mobile networks** under **WIRELESS & NETWORKS**.
3. Select the **Data enabled** check box to enable the data service.

5 Network sharing

You can use various methods to share your HUAWEI MediaPad's data connection with other wireless devices.

Sharing your network using a Wi-Fi hotspot

By setting up your HUAWEI MediaPad as a Wi-Fi hotspot, you can share your mobile network with other devices.

Before sharing your data connection, enable the data service on your HUAWEI MediaPad. For details, see [Turning on your mobile data connection](#).



The Wi-Fi only version of the HUAWEI MediaPad does not support this function.

When other devices surf the Internet using your HUAWEI MediaPad's data connection, the data usage of your HUAWEI MediaPad will be consumed.




1. On the home screen, touch **Settings**.
2. Touch **More...** > **Tethering & portable hotspot** under **WIRELESS & NETWORKS**.
3. Select the **Portable Wi-Fi hotspot** check box to turn on your Wi-Fi hotspot.
4. Touch **Configure Wi-Fi hotspot** and follow the onscreen instructions to set the required information, such as your Wi-Fi network name and password.

Once the Wi-Fi hotspot settings are complete, other Wi-Fi enabled devices can search for and connect to the Wi-Fi hotspot provided by your HUAWEI MediaPad.

Sharing your data connection through USB tethering

You can share your HUAWEI MediaPad's network with a computer using a single USB cable.

1. Use the USB cable that comes with your HUAWEI MediaPad to connect a computer to your device.
2. On the home screen, touch  **Settings**.
3. Touch **More...** > **Tethering & portable hotspot** under **WIRELESS & NETWORKS**.
4. Select the **USB tethering** check box. Observe whether USB tethering is successful according to the onscreen instructions.


You can then surf the Internet from the computer using your HUAWEI MediaPad's data connection.




When using the USB tethering function, you cannot simultaneously use your HUAWEI MediaPad as a USB storage device.

6 Managing applications

Installing an application

-  When you install an application, the "**Install blocked**" message may be displayed. Read the message carefully. If you want to continue with the installation, follow the onscreen instructions.


You can obtain and install an application using any of the following methods:

- Download it from an online app store or by using a browser. After the application is downloaded, follow the onscreen instructions to install it.
-  Some third-party applications may not be compatible with your HUAWEI MediaPad. They may not run properly and your HUAWEI MediaPad may shut down. It is recommended that you download applications from trusted sources only.
- Connect your HUAWEI MediaPad to a computer. Then use the HiSuite or third-party software to download the application. After the application is downloaded, follow the onscreen instructions to install it.
- Use Bluetooth or Wi-Fi Direct to send the application on another device, such as a phone or tablet, to your HUAWEI MediaPad. After the transmission is complete, click the application to install it.
- Download the application from a computer. Then copy the application to your HUAWEI


MediaPad. Once copied, touch  **App Installer** on your HUAWEI MediaPad's home screen. Select the application and touch  **> Install**.

Clearing the application cache

Clearing the application cache from time to time helps the HUAWEI MediaPad run more smoothly.

1. On the home screen, touch  **Settings > Manage apps**.
2. Touch **All** to view all applications.
3. Touch **Clear cache**.

Uninstalling an application


On the home screen, touch and hold the application you want to uninstall, and drag it to .

-  Some pre-installed applications cannot be uninstalled.

7 Email

Adding an email account



Email parameters must be set when you add an email account. For details, contact your email service provider.

1. On the home screen, touch  **Email**.
2. On the **Add account** screen, select the account type you want.
3. In **Account setup**, enter the email address and password.
4. Touch **Next** and follow the onscreen instructions to complete more settings.

After you add an email account, touch  > **Settings** > **Add account** to add more accounts.

Configuring an email account

You can configure an email account, such as the email signature, font size, inbox refresh frequency, and email notification tone.



1. On the home screen, touch  **Email**.
2. Touch  > **Settings**. Then you can:
 - Touch **General** to change the email font size or set the picture that will be displayed after an email is deleted.
 - Select an email account to change the email signature, set the inbox refresh frequency, or change the email notification tone.



Do not arbitrarily change the default value of **Server settings**; otherwise, sending and receiving emails may fail.

Deleting an email account

Deleting an email account will not delete any emails stored on the server, and you can use a browser or another device to log in the mailbox to check the emails. After an email account is deleted, the HUAWEI MediaPad will stop sending and receiving emails using the account.

1. On the home screen, touch  **Email**.
2. Touch  > **Settings**.
3. In the email account list, select the email account you want to delete.
4. On the screen, flick your finger up and touch **Remove account**.

8 Multimedia

Viewing photos or videos

Gallery enables you to conveniently view photos and videos. It automatically searches and organizes photos and videos stored on your HUAWEI MediaPad's internal storage and the microSD card for your easy reference.



1. On the home screen, touch **Gallery** to open Gallery.
2. Touch a photo or video to view it in full screen mode. Flick your finger left or right across the screen to view the previous or next file.



You can pinch two fingers apart or together to zoom in or out.

When viewing a photo or video, you can:



Filter fragmented images.



Open the camera.



Share photos or videos.



Play the photo or video in a small window.



View more menu options.

Taking a panoramic photo

Your HUAWEI MediaPad enables you to easily take panoramic photos without a wide-angle lens.



1. On the home screen, touch **Camera**.
2. Touch > **Panorama** to enter panoramic shooting mode.
3. Touch to start shooting. Pan your HUAWEI MediaPad slowly to capture the view.




If the viewfinder turns red, the view will not be captured. This may happen because you have moved your HUAWEI MediaPad too fast or the viewfinder scope exceeds the limit of the panoramic view. Try panning your HUAWEI MediaPad slowly.

4. Touch to stop shooting. Your HUAWEI MediaPad then automatically generates a panoramic photo.

Editing a photo

Your HUAWEI MediaPad provides powerful photo editing functions making your photos even more stunning. You can apply diversified effects, such as removing red eyes, filling light, or cropping a photo.




1. Touch **Gallery** and locate the photo you want to edit.
2. Touch  > **Edit**. Crop the photo or adjust its luminance and color as required.
3. Touch **Save**. The edited photo is saved to the same folder as the original photo.

Sharing photos or videos

You can share photos and videos via Bluetooth or email. Take your HUAWEI MediaPad and start sharing!




1. On the home screen, touch **Gallery** to open Gallery.
2. Touch and hold the photo, video you want to share.
3. Touch  and choose how you want to share the selected file, for example, using Bluetooth or Wi-Fi Direct. Then follow the onscreen instructions. For details, see [File sharing](#).

9 Customized settings

The HUAWEI MediaPad allows you to set a desired photo as the wallpaper, design home screen widgets, and set desired ringtones.

Changing the theme

 
Your HUAWEI MediaPad comes with multiple themes, easily allowing your device to have a new look as often as you want.

1. On the home screen, touch  **Themes**.
2. Select the desired theme. Then, touch **APPLY**.


Adding widgets to the home screen

 
You can add widgets, such as the calendar and bookmarks, to the home screen.

1. On the home screen, touch and hold a blank area.
2. In the displayed dialog box, touch **Widgets**.
3. Touch and hold a widget, drag it to the desired position, and release it.

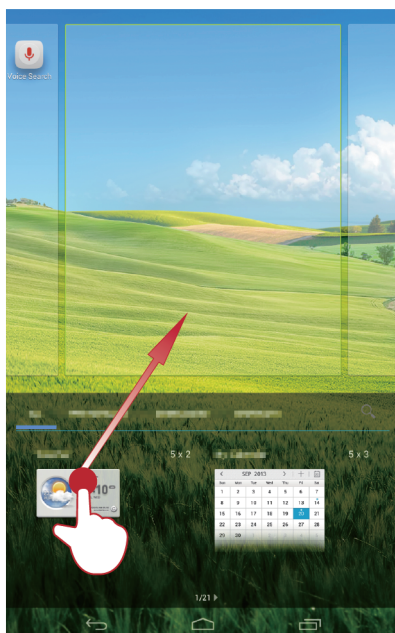 


Managing your home screen


1. On the home screen, touch and hold a blank area.
2. In the displayed dialog box, touch **Thumbnails**.
3. On the thumbnail screen, you can:
 - Touch and hold a home screen thumbnail to move its position.
 - Touch  to add a home screen.

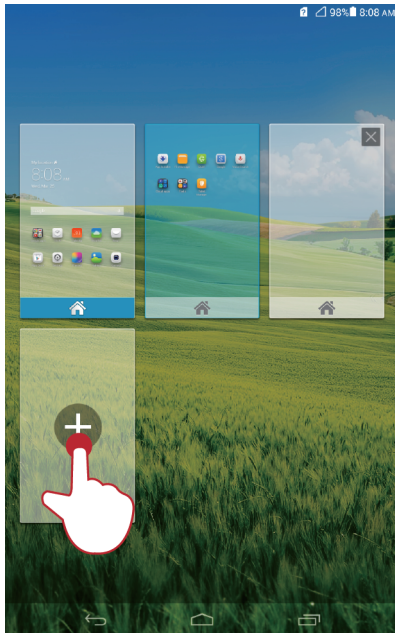


- Touch  to delete a blank home screen.

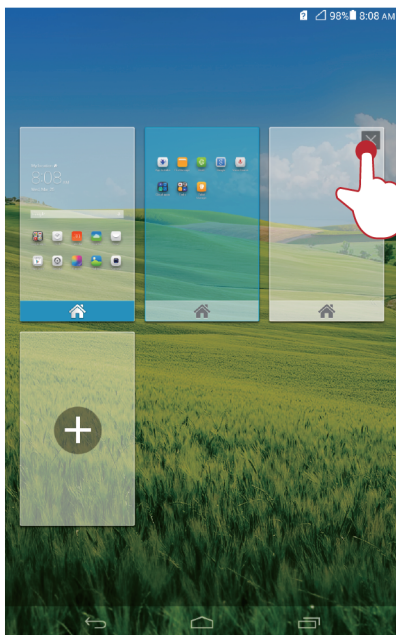

Setting the ringtone

1. On the home screen, touch  **Settings > Sound**.
2. Select the desired ringtone type.
3. Follow the onscreen instructions to select your favorite music or recording as the ringtone.

Setting the font size

1. On the home screen, touch  **Settings > Display**.
2. Touch **Font size**.
3. Select the desired font size.

Adjusting the screen brightness

Your HUAWEI MediaPad incorporates a light sensor that can automatically adjust the screen brightness based on the ambient light. You can also manually adjust the display brightness.



Lower the display brightness to to reduce your HUAWEI MediaPad's power consumption.





1. On the home screen, touch **Settings > Display > Brightness**.
2. Drag the slider left or right to adjust the screen brightness.

10 File sharing

Sharing files using Wi-Fi Direct

Wi-Fi Direct is a function to connect wireless devices using a Wi-Fi network. After wireless devices are connected, they can quickly share files among them.



1. On the home screen, touch  **Settings > Wi-Fi.**
2. Touch the key next to **Wi-Fi** or drag the key to  to turn on Wi-Fi.
3. Touch **Wi-Fi Direct.** On the receiving device, turn on Wi-Fi Direct. Your HUAWEI MediaPad then automatically searches for available devices.
4. Select the device to pair it with your HUAWEI MediaPad.
5. On your HUAWEI MediaPad, touch and hold the file you want to share. On the displayed option menu, touch **Share > Wi-Fi Direct.**
6. On the displayed option menu, select the desired device, and lastly, touch the key on the device to receive the file.

If the desired device is not displayed on the option menu, touch **Search for devices** to enter the Wi-Fi Direct settings screen. Select the desired device to connect to it.



If your HUAWEI MediaPad and the device have connected to the same Wi-Fi network and both have Wi-Fi Direct turned on, you can directly share files between them without pairing them.

Sharing files using Bluetooth

1. On the home screen, touch  **Settings > Bluetooth.**
2. Touch the key next to **Bluetooth** or drag the key to  to turn on Bluetooth.
3. Touch the name of your HUAWEI MediaPad to make it visible to other Bluetooth devices. Turn on Bluetooth on the device that is to receive the file. Your HUAWEI MediaPad then automatically searches for available devices.
4. Select the device to pair your HUAWEI MediaPad and the device.
5. On your HUAWEI MediaPad, touch and hold the file you want to share. On the displayed option menu, touch **Share > Bluetooth.**
6. On the displayed option menu, select the desired device. On the device, touch the related key to receive the file.




Copying files from a computer

Use a USB cable to connect your HUAWEI MediaPad to a computer. Follow your HUAWEI MediaPad's onscreen instructions to select a connection method. You can then transfer files between your HUAWEI MediaPad and the computer.

Connection Mode	Function	Operation
Media device (MTP)	<ul style="list-style-type: none">● On the computer, view and manage the files stored on your HUAWEI MediaPad and the microSD card.● Using Windows Media Player 11 or a later version in the computer, view and manage the multimedia files stored on your HUAWEI MediaPad and the microSD card.	<ul style="list-style-type: none">● Click the newly displayed drive letter on the computer. Then transfer files between your HUAWEI MediaPad and the computer.● Start Windows Media Player on the computer. Follow the onscreen instructions to transfer multimedia files between your HUAWEI MediaPad and the computer.
Camera (PTP)	On the computer, view and manage the image files stored on your HUAWEI MediaPad.	Click the newly displayed drive letter on the computer. Then transfer image files between your HUAWEI MediaPad and the computer.
HiSuite	<ul style="list-style-type: none">● Manage the files (such as contacts and images) on your HUAWEI MediaPad using the HiSuite software.● On the computer, view and manage the files stored on your HUAWEI MediaPad and the microSD card.	<ul style="list-style-type: none">● Follow the HiSuite onscreen instructions to perform operations.● Click the newly displayed drive letter on the computer. Then transfer files between your HUAWEI MediaPad and the computer.
USB storage device	On the computer, view and manage the files stored on the microSD card. NOTE ❗ This method is available only when your HUAWEI MediaPad has a microSD card inserted.	Click the newly displayed drive letter on the computer. Then transfer files between the microSD card and the computer.


11 Contacts

Creating a contact

1. On the home screen, touch  **Contacts** to display your contacts list.
2. Touch  .
 If you are creating contacts for the first time, your HUAWEI MediaPad prompts you to select a storage location. When you create contacts next time, the new contacts are stored in the same storage location by default. In addition, the storage location is displayed on the new contacts screen, and you can touch the storage location to select a new one.
3. Enter the related information, such as the contact's name, phone number, and email address.
4. Touch **Add another field** to add more information.
5. Touch **Done**.




Synchronizing contacts

You can synchronize the contacts stored in your Gmail and Exchange accounts to your HUAWEI MediaPad and vice versa.

1. On the home screen, touch  **Settings**.
 2. Under **ACCOUNTS**, touch the type of account you want to synchronize.
 3. Touch the account you want to synchronize.
 4. Select the **Sync contacts** check box.
- If the account you want to synchronize has not been added to your HUAWEI MediaPad, touch **Add account** and follow the onscreen instructions to add the account. When it is added, your HUAWEI MediaPad automatically synchronizes with it.



Importing contacts

You can import contacts from the SIM or microSD card to your HUAWEI MediaPad. You can also use Bluetooth to import contacts from other Bluetooth devices.

1. On the home screen, touch  **Contacts** to display your contacts list.
2. Touch  > **More** > **Manage contacts**.
3. In the displayed dialog box, select an import method and follow the onscreen instructions to import contacts.
 If you choose to import contacts from another device using Bluetooth, turn on Bluetooth on the device and follow the onscreen instructions to pair with your HUAWEI MediaPad.




Backing up contacts

You can back up your contacts to a microSD card in case your contacts are accidentally deleted or lost.

1. On the home screen, touch  **Contacts** to display your contacts list.
2. Touch  > **More** > **Manage contacts**.
3. In the displayed dialog box, touch **Export to storage**.

Sharing contacts

You can share the contacts on your HUAWEI MediaPad with friends using multiple methods, such as email and Bluetooth.

1. On the home screen, touch  **Contacts**.
2. In the contacts list, you can:
 - Select the contact you want to share and touch  > **Share**.
 - Touch  > **More** > **Share contacts** and select more contacts to share.
3. In the displayed dialog box, select a sharing method and follow the onscreen instructions.
For details, see [File sharing](#).



12 calls



The Wi-Fi only version of the HUAWEI MediaPad does not support this function.

Making an emergency call



In the event of an emergency, you can make emergency calls without a SIM card. However, you must still be within the coverage area.

1. On the home screen, touch  **Phone**.
2. Enter a local emergency number and touch .



Emergency calls are subject to the quality of the cellular network, use environment, service provider policies, and local laws and regulations. Never rely solely on your HUAWEI MediaPad for critical communications when emergencies occur.

Adding an unknown number to your contacts

1. On the home screen, touch  **Phone**.
2. From the call log, touch  next to an unknown number.
3. Touch **Create new contact** or **Save to existing contact** to add the number to your contacts list.

Clearing call logs

To delete a single call log: On the **Phone** screen, touch and hold the call log. On the displayed option menu, touch **Remove from call log**.

To clear all call logs: On the **Phone** screen, touch  > **Clear call log** > **OK**.

13 Messaging




The Wi-Fi only version of the HUAWEI MediaPad does not support this function.


Searching for a message

If you are having trouble finding a specific message in a pile of messages, this function can come to your rescue.



1. On the home screen, touch **Messaging**.
2. Touch  > **Search**.
3. Enter a keyword in the search box.
4. In the results list, select the desired message to open it.

Customizing message settings

To customize text and multimedia message settings, message notification tones, and more, from the message list, touch  > **Settings**.

14 Settings

Setting the screen timeout period

You can set a screen timeout period so your HUAWEI MediaPad automatically turn offs the screen to save power.



1. On the home screen, touch **Settings > Display > Sleep**.
2. Choose a timeout period.

Setting a screen lock



1. On the home screen, touch **Settings > Security > Screen lock**.
2. Select a locking method and follow the onscreen instructions.

With a screen lock set, if your HUAWEI MediaPad is idle for a specified period of time, it automatically locks its screen. You can also touch the power key to lock the screen.

Adjusting the volume

You can set the volume for the ringtone, media, alarms, and notifications.



1. On the home screen, touch **Settings > Sound > Volume**.
 2. Drag the sliders left or right to adjust the volume.
- You can also use the volume keys to adjust the volume of running applications.

Checking the memory status

Before moving a large file to your HUAWEI MediaPad's internal storage or the microSD card, check the available storage space that has left on it.



1. On the home screen, touch **Settings**.
2. Touch **Storage** to view memory information.

Setting the date and time



1. On the home screen, touch **Settings > Date & time**.
2. Deselect the **Automatic date & time** check box.
3. Follow the onscreen instructions to set the date and time.



If your HUAWEI MediaPad is set to automatically update the date and time, it obtains the date and time information from the network and updates them according to your time zone. In this case, you cannot manually change the time zone, date, or time displayed on your HUAWEI MediaPad.

Formatting a microSD card



Back up important data before you format a microSD card.



1. On the home screen, touch **Settings**.
2. Touch **Storage > Erase SD card**.

Restoring factory settings



Restoring your HUAWEI MediaPad to its factory settings erases all your personal data, including information about your accounts, your system and application settings, and your installed applications. Before restoring factory settings, back up the important data on your HUAWEI MediaPad.



1. On the home screen, touch **Settings > Backup & reset**.
2. Touch **Factory data reset** and follow the onscreen instructions to back up data or directly restore factory settings.

Updating your HUAWEI MediaPad



- Updating your HUAWEI MediaPad may clear all the data in it. Back up important data before updating your HUAWEI MediaPad.
- If you use unauthorized software to update the system, an update failure may occur or your personal information may be leaked. Update your HUAWEI MediaPad online or by using authorized software.



1. On the home screen, touch **Cloud apps > System Update** to view system information.
2. Touch **Online update** to download and install updates from a Huawei server, or touch **Local update** to update your HUAWEI MediaPad locally.



If you choose to update your HUAWEI MediaPad locally, carefully read the update guide accompanying the update package.

15 Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- Place your device in a safe area to prevent it from unauthorized use.
- Set your device screen to lock and create a password or unlock pattern to open it.
- Periodically back up personal information kept on your memory card, or stored in your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- If you use services such as Wi-Fi or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- Install or upgrade device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Huawei or third-party application providers.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Your device may provide detection and diagnostic information to third-party application providers. Third party vendors use this information to improve their products and services.
- If you have concerns about the security of your personal information and data, please contact mobile@huawei.com.

16 Legal Notice

Copyright © Huawei Technologies Co., Ltd. 2014. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei").

The product described in this manual may include copyrighted software of Huawei and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and Permissions



HUAWEI, HUAWEI, and
Technologies Co., Ltd.



are trademarks or registered trademarks of Huawei

Android™ is a trademark of Google Inc.

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Huawei reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

Third-Party Software Statement

Huawei does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei will not provide any warranty of any kind for third party software and applications. Neither will Huawei provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Huawei does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product is based on the open-source Android™ platform. Huawei has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei does not provide any warranty or representation in connection with any such compatibility and expressly excludes all liability in connection with such matters.

DISCLAIMER

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Privacy Policy

To better understand how we protect your personal information, please see the privacy policy at <http://consumer.huawei.com/privacy-policy>.



903346_01